



Le Pan II Screen Replacement

Cracked screens are one of the most common and frustrating issues when it comes to owning a tablet. Learn to replace a cracked or broken screen on your Le Pan II tablet.

Written By: Kelly Moniz



INTRODUCTION

In this guide, you will be shown step-by-step how to replace your broken Le Pan II screen. This screen is attached to a plastic casing with adhesives and this should be kept in mind during the following steps.




TOOLS:

- [Metal Spudger](#) (1)
- [iFixit Opening Tools](#) (1)

Optional


Step 1 — Screen

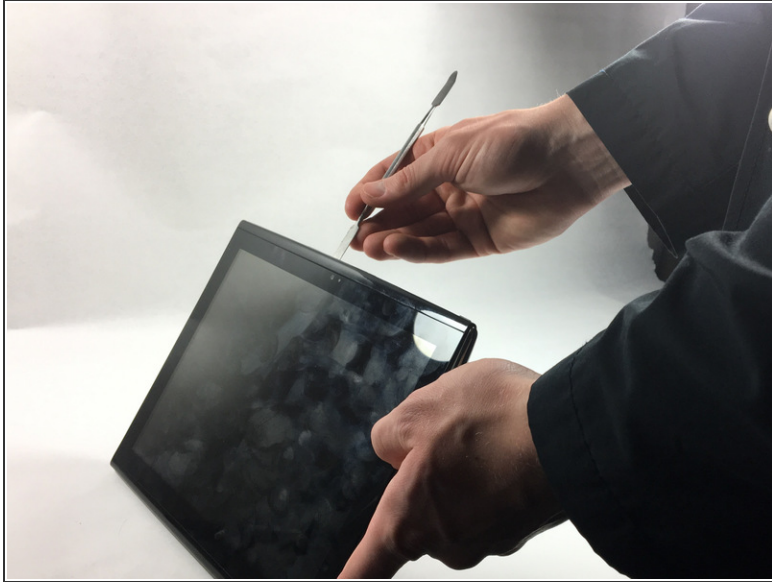

- Insert metal spudger between front and back panel to pry apart.
- Continue to pry while moving the metal spudger along the crevice to completely separate two panels.



⚠ Avoid using metal when opening devices, as it can damage or crack the screen.

Step 2

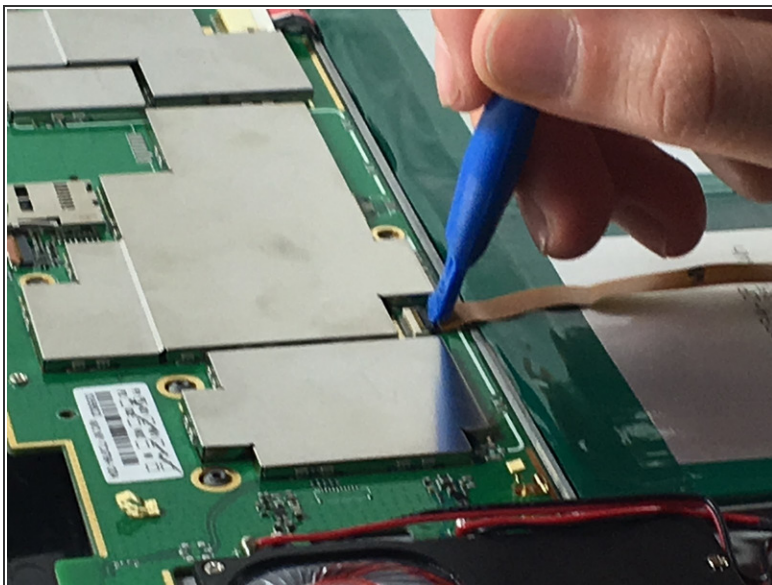


- Use the plastic opening tool to disconnect the flat ribbon cable from the motherboard connector.
- Disconnect the flat ribbon by gently pulling it out from its connecting port.

Step 3

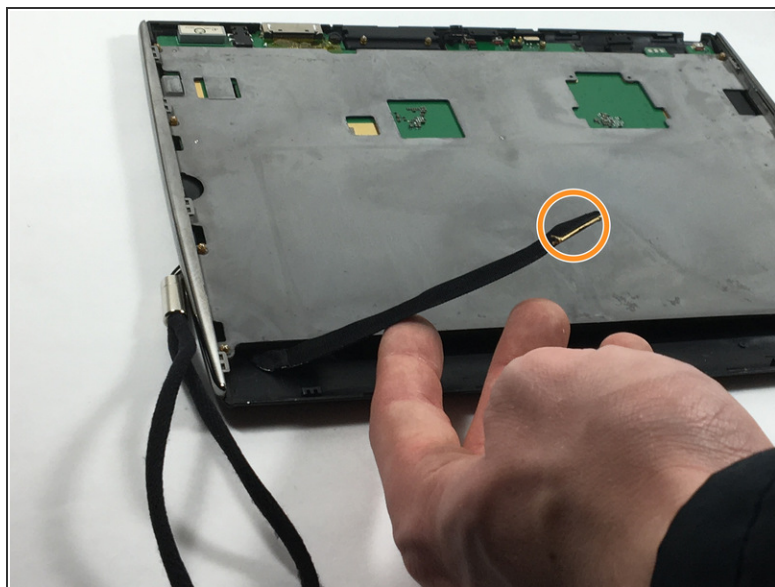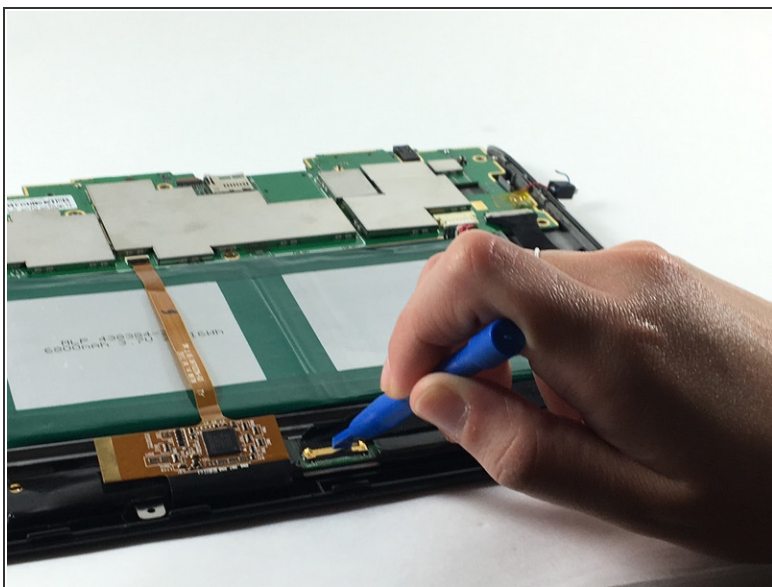

- Use the plastic opening tool to disconnect the display cable from its motherboard connector.
- Disconnect the display cable by gently pulling it out from its connecting port.

Step 4

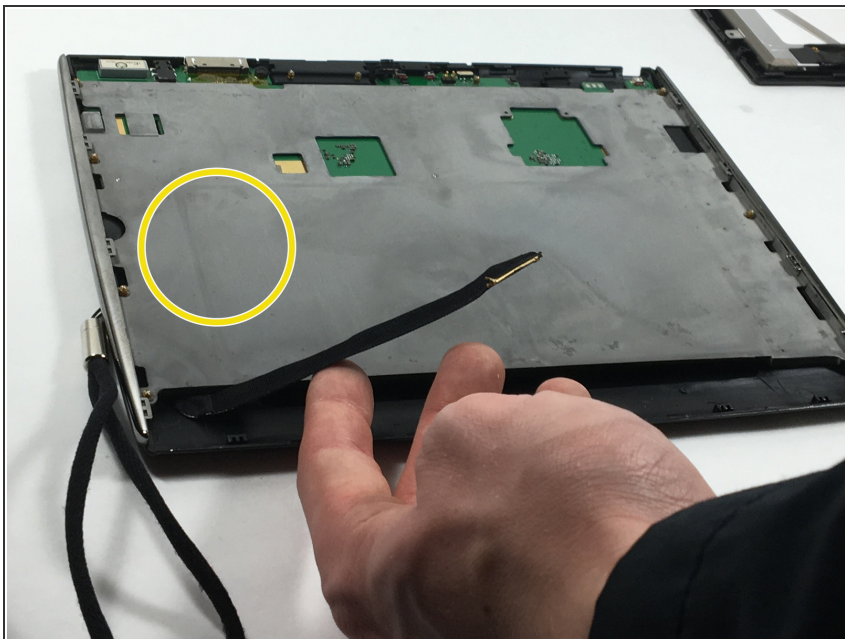


- Remove grey metal backing from screen.

Step 5



- Flip the tablet so the screen is facing upward, and use the metal spudger to pry apart the screen from the side pieces.

Step 6

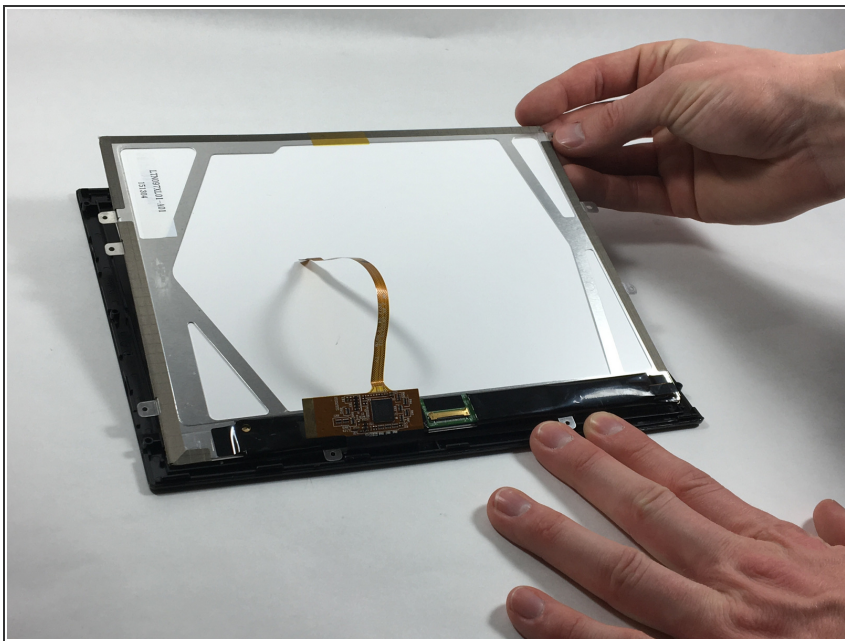

- Lift and carefully remove the LCD display from the front cover.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 08:10:36 AM.